 
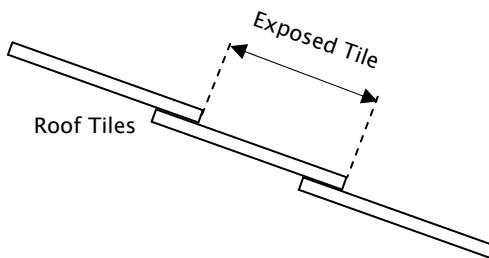 
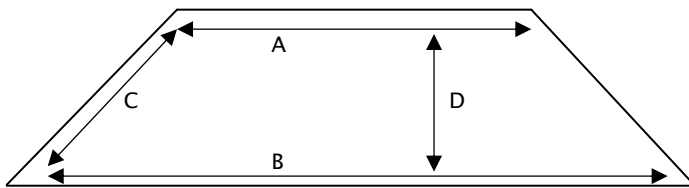 


# How to Measure

## How to measure for Solar Heating

When measuring a roof, it's very important to state the "Actual Roof Measurements" on your order, rather than the solar collector measurements. That way, we can make the solar system to suit the roof shape.

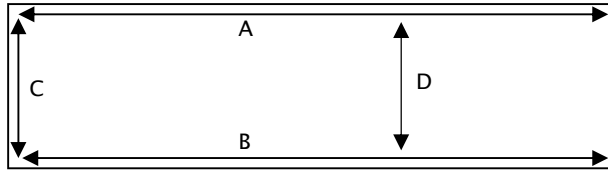

### Measurements Required:

#### Metal Roof:

- A: Top of Roof Length
  - B: Bottom of Roof length
  - C: Manifold Side Length (Angled or Straight)
  - D: Top to Bottom of Roof
- \* Please take measurements internal of capping, flashing & ridges

 
#### Tiled Roof:

- The measurements above are required for a tiled roof along with the following 2 additions:
- A: The Exposed Tile Length from top to bottom (See Left)
  - B: Number of tiles from top to bottom
- \* Orders cannot be processed without a tile length

- When measuring all roofs, you **must** take down the above measurements.
- With systems that have more than one section, these measurements must be taken for each section, i.e Section A and B.
- Only roof measurements will be accepted on our forms, so please make sure you **do not** make any allowance in your measuring for the header pipes. We will do that for you.
- Please indicate in the diagram section where the solar is to be located, i.e "keep high on roof"

## How to measure for a Pool Cover

- No matter what the shape of the pool, measure as if a rectangle, i.e **Widest & Longest points**.
- Always take the waterline measurement under the coping tile.

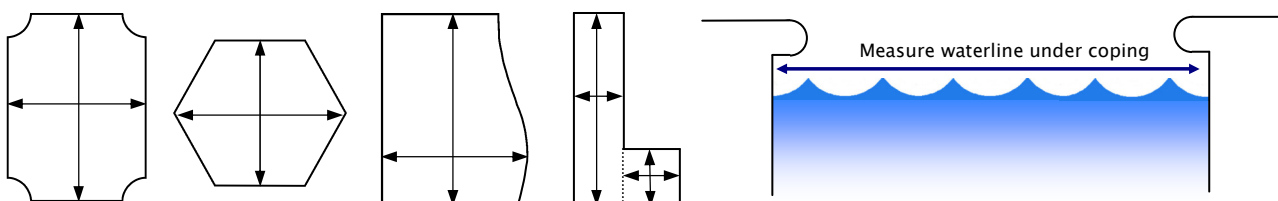

## Ordering tips

- Measure the roof/pool, ensuring you get all the required measurements listed above.
- Fill in as many details as possible on a Sunbather Order Form (pages 16-19) or your letter head paper.
- **Fax or email** your orders to your nearest Sunbather Office -

**VIC:** fax 03 5979 3577 or email [info@sunbather.com.au](mailto:info@sunbather.com.au)

**NSW:** fax 02 9894 6634 or email [nsw@sunbather.com.au](mailto:nsw@sunbather.com.au)

**QLD:** fax 07 3823 5912 or email [qld@sunbather.com.au](mailto:qld@sunbather.com.au)

#### Victoria:

Head Office and Factory  
2174 Frankston-Flinders Road  
PO Box 107 Hastings VIC 3915  
T: 03 5979 5777 F: 03 5979 3577  
[info@sunbather.com.au](mailto:info@sunbather.com.au)

#### Queensland:

Unit 5, 20 Neumann Road  
Capalaba QLD 4157  
T: 07 3823 5910 F: 07 3823 5912  
[qld@sunbather.com.au](mailto:qld@sunbather.com.au)

#### New South Wales:

Unit 5, 4 Gladstone Road Castle Hill NSW 2154  
P.O Box 8201 BHBC Baulkham Hills NSW 2153  
T: 02 9894 7550 F: 02 9894 6634  
[nsw@sunbather.com.au](mailto:nsw@sunbather.com.au)

